MULTIFUNCTION SPOOL VALVES

air operated

and solenoid air operated

G3/4-G1 - ISO 5599/1 subbase-mounted body



5/2-5/3Series **544**Type
ISO size 4

MULTIFUNCTION

JOUCOMATIC


• Multifunction selector


The multifunction selector is equipped with 2 pilot selector seals (A) located between the body (B) and the covers (C), on both sides: pilot and return. Each selector can be set on 3 or 4 positions. Rotating or turning it upside-down allows the following functions:


- internal or external supply to pilot or return operators.
- selection of the type of operator : air operated or solenoid-air pilot or return.

For this, it is only necessary to position one of the arrows of the selector into the notch matching the diagram of the required function (see below). Functions can be modified at will. The valves are delivered with the selector pre-set on the position corresponding to the function requested on order (see table CHOICE OF EQUIPMENT).

External supply enables the valves to be used with a fluid pressure ranging from 0 to 12 bar and with vacuum.

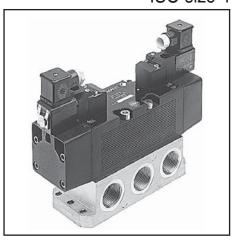

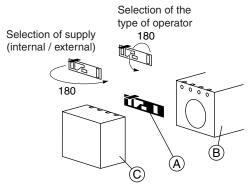

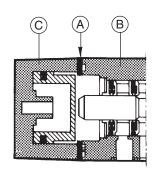


Pilot function

Pilot operators Return operators Differential internal supply Solenoid differential internal supply Air operated <u>r-</u>⊡1 2 🗀 external supply Solenoid-air **V** 4 7 4/ Solenoid-air internal supply external supply Solenoid-air external supply Solenoid-air 3 1 4/ internal supply 1 🞞 🕂 Solenoid differential external supply Air operated external supply Notches for selector positionning Differential external supply Spring


www.valves-direct.com

Operating principle

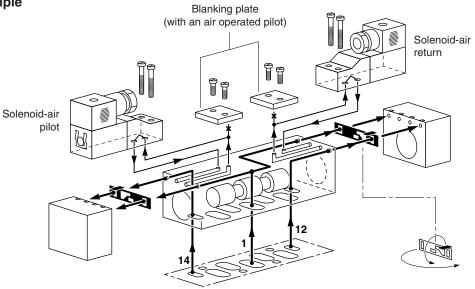


· Changing from an air operated return valve to a differential return valve

An air operated return valve can be changed into a differential return valve by turning over the outside piston ring as shown in the diagram below (1).



Manual operator using a tester (option)

A manual operator can be equipped with a tester (2) by knocking the knock-out plug (3) out of the end cover.



• An air operated valve can be changed into a solenoid air valve by :

- re-positionning the selector seal,
- removing the upper blanking plate (side 12 or 14),
- fitting a selector seal if lacking,
- adding a solenoid pilot valve on the upper part.


• A solenoid air valve can be changed into an air operated valve by :

- removing the solenoid pilot valve,
- fitting a blanking plate on the pilot base (plate code: 88100073),
- re-positionning the selector seal.

USE WITH UNLUBRICATED AIR

This range of JOUCOMATIC valves will operate satisfactorily with lubricated air or unlubricated air and even with dry air, due to a sealing device which has been patented. Essentially, a "T" seal backed up by a cushioning or compensation seal.

This arrangement of seals assures a minimum pilot pressure which will remain constant even after the valve has been stopped for a long period of time. When re-starting, the performance of the valve will be the same as during continuous operation. This important "non-stiction" characteristic assures satisfactory performance under all conditions.

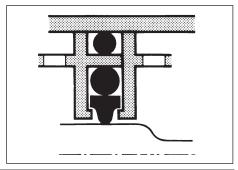

00306GB-2008/R01 Availability, design and specifications are subject to change without notice. All rights reserved.

O

MULTIFUNCTION SPOOL VALVES

solenoid air operated

G3/4-G1 - ISO 5599/1 subbase-mounted body

544
Type
ISO size 4

FEATURES

JOUCOMATIC

• Choice of internal/external supply with selector seals (vacuum use to -0,950 bar)

GENERAL

Fluid Air or neutral gas, filtered, lubricated or not Operating pressure Air or neutral gas, filtered, lubricated or not -0.950 to +12 bar (with external supply to pilot)

+2.5 to +10/12 bar (with internal supply to pilot)

Pilot pressure See specifications tables

Ambient temperature -10°C to +40°C

Flow (Qv at 6 bar) 6300 l/min (ANR) (with subbase G 3/4) 7000 l/min (ANR) (with subbase G 1)

Flow coefficient Kv = 90 (with subbase G 3/4) Kv = 100 (with subbase G 1)

Life 5 millions of cycles (in normal operating conditions)

Base ISO 5599/1 - Size 4

Subbase Single subbase ISO/AFNOR NF E49085

CONSTRUCTION

Body and cover Die-cast zinc alloy Seals NBR (nitrile)

Internal parts Light alloy and POM (polyacetal), die-cast zinc alloy



type		voltage	consu	mption	insulation	protection	electrical connection		
of coil		voltage	inrush	hold	class	degree			
series	~	24V-48V-115V-230V-50 Hz	12 VA	6 VA (4 W)	Г	IP 65	spade plug size 30 connector,		
192	= 24V-48V		5 W		Г	IP 05	ISO4400/EN175301-803, form A rotatable by 90°		

SPECIFICATIONS 5/2

formation.	operators	resp	onse	pi	lot	2 cata	logue numbers		
function 5/2	pilot (14) solenoid	time (ms)		pres	ssure ar)	valve	solenoid pilo + quantity & catalog number	lot ogue	
symbol	air operated return (12)	ener- gized	de-ener gized	min.	max.		with standard connector	(M)	
14 2 2 12 12 12 13 14 15 15 15 15 15 15 15 15 15 15 15 15 15	spring return	60	220	2,5	12	54490017			
14 4 2 12 55 V 3	differential return	90	170	2	12	54490018	+ 1x \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	× • •	
14 12 12 12 12 12 12 12 12 12 12 12 12 12	air return	40	-	1,5	12	54490019			
14 4 2 12 55 V3 1	solenoid differential return	40	-	2	12	54490020	19201001	×	
14 4 2 12 55 V3	solenoid air operated return	40	-	1,5	12	54490021	+ 2x 19201002 19201003	•	

(M) Type of manual operator on pilot(s):

X : without

• : maintained

▼ : impulse

F

www.valves-direct.com

SPECIFICATIONS 5/3

function 5/3	operators pilot (14) solenoid	response time (ms)		pres	lot sure ar)	2 cat	talogue numbers solenoid pilot quantity & catalogue number			
symbol	air operated return (12)	ener- gized			max.		with standard connector	(M)		
14 W 12 12 14 12 14 12 14 12 14 14 14 14 14 14 14 14 14 14 14 14 14	Pressure held W1	70	250	3	12	54490022	19201001	×		
14 W 12 W 12	Pressure release W3	70	250	3	12	54490023	+ 2x < 19201002 19201003	•		

(M) Type of manual operator on pilot(s): X: without ●: maintained ▼: impulse

OPTIONS

- Equipment with manual testers so that the spool position can be checked
- Solenoid valve intrinsically safe series 195/ia certified EEx «ia»
- Connector with cable 2m long code: 88122612
- Connector with transil protection (see "Coils and accessories" section)
- Solenoid valve with plug and built-in visual control and protection :

Solenoid valve	withou	t connector —	- + -	Connector	r with built-in visua	al control and VDR	RC protection					
type	(M)	solenoid valve without connector		catalogue number (~ / =)								
of valve	(,	catalogue number		24V	48V	115V	230V					
	×	19201022										
192 NC (1)	•	19201023	+	88122603	88122604	88122605	88122608					
	▼	19201024										


(M) Type of manual operator on pilot(s): X: v athout ●: maintained ▼: impuls


SUBBASES

type	subbase catalogue	port orifices						
of subbases	number	12-14	1-2-4	3-5				
single subbases with	35500144	G 1/8	G 3/4	G 3/4				
side port	35500082	G 1/8	G 1	G 1				

⁽¹⁾ Solenoid valve series 192 - 3/2 NC - Ø 2,1mm with exhaust in base

DIMENSIONS (mm), **WEIGHT** (kg) VALVE ON **SINGLE SUBBASE** WITH SIDE PORT

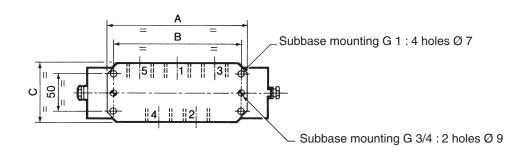

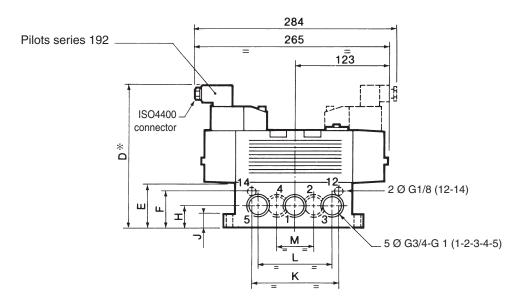

code subbase	port orifices			dimension										weight		
	12-14	1-2-4	3-5	Α	В	С	D	E	F	н	J	К	L	М	with 1 pilot 192	with 2 pilots 192
35500144	G 1/8	G 3/4	G 3/4	195	177	85,5	189	42	32	22	19	116	88	40	4,860	5,120
35500082	G 1/8	G 1	G 1	186	172	80	207	60	47	30	18	116	106	50	4,960	5,220

^{*} + 15 mm for plug removal

www.valves-direct.com

00306GB-2008/R01 Availability, design and specifications are subject to change without notice. All rights reserved.